

ROBAM



User Manual

Before operating this unit, please read the user manual completely and keep it. If the manual is lost, you can send e-mail to overseas@robam.com, request for an electronic manual.

CXW-220-A852

Range Hood

CONTENTS

Safety Precaution.....	1
Important Information.....	4
Product Description.....	5
Packing List.....	5
Installation.....	6
User Manual.....	9
Maintenance.....	10
Removal of Components.....	10
Circuit Diagram.....	12
Troubleshooting of General faults.....	13

Dear users:




Thank for your buying our range hood. Please accept our best regards. Please read this user manual carefully before installation and operation.

*The pictures in this manual only for your reference. If the picture isn't accord with object, subject to object. We keep to right to update appearance, structure or products without notice.

Safety Precaution


In order to avoid harm or property damage to the users or other person, the following distinction and marks are stipulated. They are important safety precaution, please comply strictly based on the full understanding.

Subject to harmful or destruct degree







 Danger	If ignore this sign and operate product improperly, it's highly possible to cause danger, serious injury or fire.
 Warning	If ignore this sign and operate product improperly, it's possible to cause danger, serious injury or fire.
 Notice	If ignore this sign and operate product improperly, it's possible to cause injury or loss.

Notice and Prohibit Mark



 Prohibit	 Prohibit Flame	 Prohibit Touch	 Prohibit Touch by Wet Hand	 Prohibit Disassembly	 Strict Execution	 Necessary Earthed	 Caution Electric Shock	 Caution Scald
--	---	---	---	---	---	---	---	--

 **Warning** Please use this product according to manual strictly, or ROBAM shall not take any responsible caused by improper operation.









Danger

 Prohibit	Don't allow children or weakling to use range hood separately, or it may cause electric shock or other accident.
 Prohibit	Prohibit water on motor, switches or other electric parts; Prohibit wash range hood by water spray. Don't use range hood if wet or it may cause electric leakage or shock.
 Prohibit	Don't change, stretch, bind or press electric wire, or it's possible to cause electric shock or fire because of broken wire.
 Prohibit	Prohibit any change of interior circuit, or it may cause injury or other danger, for example, electric shock or fire.
 Prohibit Touch by Wet Hand	Don't touch plug, electric parts or button by wet hands, or it may cause electric shock.
 Strict Execution	Unplug before cleaning, installing or maintaining, avoiding from electric shock.








Danger

 Strict Execution	Please turn off range hood immediately if pan got fire (range hood shall aggravate fire if it's working) and extinguish fire by effective action. For example, cover flame by metal cover, turn off gas valve immediately and remove inflammable things.
 Strict Execution	Any abnormal, please turn off power, take off plug or cut off electric source, and contact service. It's possible to cause electric shock or fire if using range hood under abnormal situation.




Warning

 Prohibit Disassembly	Range hood must be installed, disassembled or maintained by professional person.
 Prohibit	Stove fire shall be extinguished timely when it is not used; do not flambe under the range hood and it's prohibited to bake food under range hood directly to prevent range hood from damaging and causing accidents.
 Prohibit Touch	Don't touch bulb if it's on or just close in short time, or it may cause scald.
 Strict Execution	In order to ensure safety, range hood must be installed by specific accessory (especially expansion pipe and wooden screws, or it may cause accidental drop of range hood). The pipe bore and hole must fit tightly during the installation of metal expansion pipe. It is prohibited to make excessively large hole to prevent accidental drop of loosening expansion pipe.
 Strict Execution	The range hood must be used by specific plug and properly ground it. It's possible to cause electric shock, hot plug or fire because of improper electric wire. Installation must be executed by professional person based on local electrical regulations. Before connect electricity, power must be turned off.
 Strict Execution	If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
 Strict Execution	All operation must comply with our safety guidelines as well as local safety regulations.
 Strict Execution	There shall be adequate ventilation of the room when the range hood is used at the same time as appliances burning gas or other fuels.








Warning

 Strict Execution	<p>This appliance just for household use only. And it's not allowed to exhaust dangerous or explosive matter or air. It should be put under dry and ventilation environment without dangerous air.</p>
 Strict Execution	<p>The range hood and electric circuit must be installed by skilled and trained personnel with required qualification. When installation, the related regulation, standard or instruction on fire must be complied. It may cause danger because of improper installation, for example, electric shock, drop or fire accident.</p>
 Strict Execution	<p>The outlet must be connect with outside. In order to ensure safety and fresh air, waste gas should be exhaust to outside. Don't exhaust waste gas to the wall, loft or garage.</p>
 Strict Execution	<p>There is a fire risk if cleaning is not carried out in accordance with the instructions.</p>
 Strict Execution	<p>Keep a good habit to turn off gas hob and gas valve if go outside, sleep or finish operation. Replace or check gas pipe regularly, since gas alarm device can't completely avoid accident caused by gas leakage.</p>
 Strict Execution	<p>This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.</p>
 Strict Execution	<p>The minimum distance between the supporting surface for the cooking vessels on the hob and the lowest part of the range hood. When the range hood is located above a gas appliance, this distance shall be at least 650mm. If the instructions for installation for the gas hob specify a greater distance, this has to be taken into account.</p>

Notice

 Prohibit	<p>The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels, the discharge of air must fulfill the requirements of local regulations.</p>
 Strict Execution	<p>Before removing range hood for installation, clean or maintainance, power must be cut off avoiding from electric shock. When installation, clean or maintainance, protective gloove must be wear avoiding from injury.</p>
 Strict Execution	<p>The temperature for range hood working can't exceed 40°C.</p>

Notice

 Strict Execution	<p>Because the installation is difficult and hood is heavy, the installation shall be executed by professional person based on manual.</p>
 Strict Execution	<p>Don't break electric wire or other invisible equipment when cutting something or drilling holes on ceiling.</p>
 Strict Execution	<p>When range hood is using in well sealed building, it should have air inlet or open door to ensure good ventilation.</p>
 Strict Execution	<p>When the oil exceeds 2/3 or near tick mark in the oil cup, clean it in time. Don't eat waste oil from oil cup.</p>
 Strict Execution	<p>The wall of installing range hood needs enough strength. For hollow walls, the thickness of solid layer of hollow wall must be more than 30mm, but for concrete walls, it can be drill holes directly. The range hood must be fixed on the wall firmly.</p>
 Strict Execution	<p>Accessible parts may become hot when used with cooking appliances.</p>
	<p>DISPOSAL: Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary. This product must not be disposed together with the domestic waste. This product has to be disposed at an authorized place for recycling of electrical and electronic appliances.</p> <p>By collecting and recycling waste, you help save natural resources, and make sure the product is disposed in an environmental friendly and healthy way.</p>

Important Information

Package of Range Hood

Please settle those packages carefully in order to protect environment. Don't allow children to play plastic film and package, it may cause asphyxia. Please avoid children near package material.

Before use Range hood

This range hood exhaust fume outside. Please read this manual and all information carefully before installation and operation. Please comply with our suggestion. If it's necessary, please read manual for gas hob. And please keep these manual carefully for future reference. If range hood has obvious damage, please don't electrify and contact operator.

Product Description

Technical Data


Model	CXW-220-A852	Noise	51dB(A)
Power Supply	220-240V~ 50Hz	Rated Power Input	224W
Total Pressure Efficiency	≥23%	Rated Main Motor Power Input	220W
Nominal Wind Pressure	310Pa	Lamp Power (max)	4W
Airflow	1140m ³ /h	Dimension (L×W×H)	(895×513×695)mm
Max static pressure	410Pa	Net Weight	30.5kg
Normal Odour Reduction Factor	≥98%	Grease Absorption Factor	≥92%

- Note: 1. The performance test results are all in 230V~ 50Hz power supply environment. The airflow in according to IEC61591, the noise in according to IEC60704.
 2. The determined value of nominal wind pressure,max static pressure shall not be less than 90% of declared value.
 3. The noise declared value shown is A weighted sound pressure level, and the sound power level is A weighted sound pressure level plus 14 decibels.
 4. When turbo function is enabled, the airflow is 1260m³/h.

Body Size

The marked sizes are for reference only, the depth dimension includes machine feet. (Unit: mm)

Note: The size inside the cabinet should be larger than the size with *.

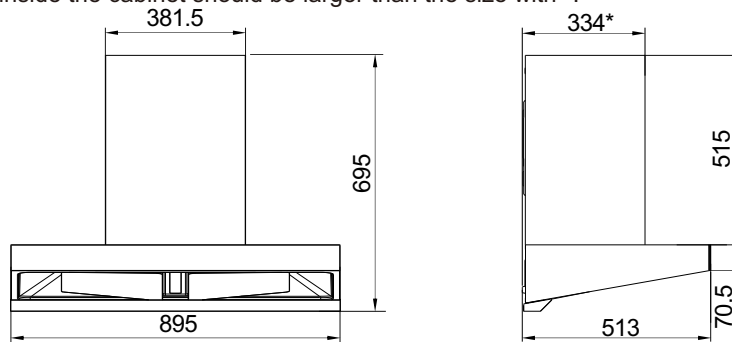


Packing List

After opening the box, please count the contents and load the stall and oil cup onto the hood before use.

Packing List	No.	Name	Quantity	No.	Name	Quantity
	1	Range hood	1	9	Baffle combination	1
	2	Ø185(outer diameter) aluminum exhaust pipe	1	10	Oil cup	1
	3	Exhaust pipe fixed strip		11	ST4.2×18 self-tapping screw	10
	4	Exhaust pipe tape		12	4×60 wood screw	4
	5	Exhaust pipe connection		13	Hitching foot stopper	1
	6	Plastic expansion pipe	4	14	M6 metal expansion pipe	1
	7	User manual	1	15	Hitching foot	1
	8	Check valve	1	16	ST4.2×8 self-tapping screw	6

Installation

 If the flue aperture is less than air duct aperture, it will influence the fume suction effect and the too long air duct will influence the fume suction effect, too.

Preparation for installation

●Surrounding

Keep the hood away from too many doors and windows, so as to avoid air convection affecting the efficiency.

●Tools preparation

The hood will be installed with the following tools

1.an impact drill (with drill bit); 2.a wrench; 3.a screwdriver; 4.a ruler.

Notice

- Installation and circuit setting must be done by experienced professionals. Only a professionally trained person with an installation qualification can install the hood. Non-professionals are not allowed to install, dismantle and repair the hood.
- Please do not power on the hood before installation to avoid electric shock.
- Do not expose the hood if your kitchen is under renovation, because construction materials, dusts, paint, coatings, and emitted gases will corrode and tarnish the hood surface. Therefore, it is recommended to install it after the renovation is completed.
- If you need move the Gas Hob before installing the Range Hood, please close the main valve before moving the Gas Hob.
- Don't install the hood on wood and other combustible walls. The wall shall be made of noncombustible materials with enough strength and the surface shall be flat.
- The hood may have very sharp edges. So, please wear protective gloves during hood installation, cleaning or repair.
- When drilling on the wall or ceiling board, keep away from embedded wires and other concealed devices to avoid electric shock and fire.
- Do not install the hood at a too high position as well as keep the hood free from disturbance of ambient airflow lest the reduction of smoke pumping effect shall occur.
- When making cabinet, please leave space for installation and disassembly of the hood in order to maintain and overhaul the hood.
- When installing, please keep the machine body remain horizontal.
- Please use single phase grounded socket and the hood shall be well grounded (water pipe grounding is not reliable and gas pipeline grounding has risks of causing fire disaster and explosion).
- In order to ensure safety and successful installation, please use standard accessories provided with the hood for installation, otherwise the hood may be at risk of falling down.
- If the power cord is damaged, in order to avoid danger, it must be replaced by manufacturer, professionals of its maintenance department or similar departments. Please do not carry out restructuring, stretching, knotting and squeezing or apply heavy objects to the power cord, etc., otherwise it may cause power cord damage easily, leading to accidents such as electric shock and fire disaster, etc.
- After installation, please clean the surface of the hood, and then supply power for test run.

Installation

Note: All data units in the following diagram are expressed in mm.


● Determine the position

The removable baffle can be adjusted according to the actual situations. The installation pitch of holes is shown in Figure 2. The hood body shall be centered vertically and kept level.

Ceiling hole size is shown in Figure 3. The socket location is recommended to be installed above the ceiling.


⚠ The hood shall be installed right above the hob. The minimum distance between the supporting surface for the cooking vessels on the hob and the lowest part of the range hood. When the range hood is located above a gas appliance, this distance shall be at least 650mm. If the instructions for installation for the gas hob specify a greater distance, this has to be taken into account.

Mounting hole of the drawing panel

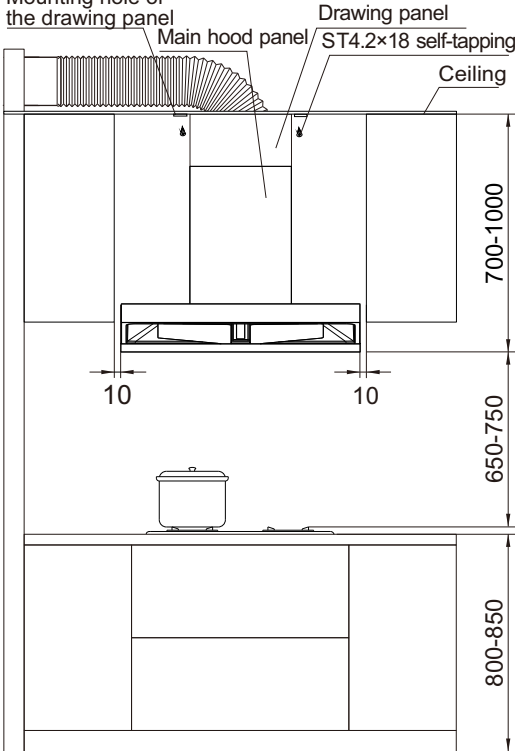


(Figure 1-1 Installation method of hood without removable baffle)

Figure 2

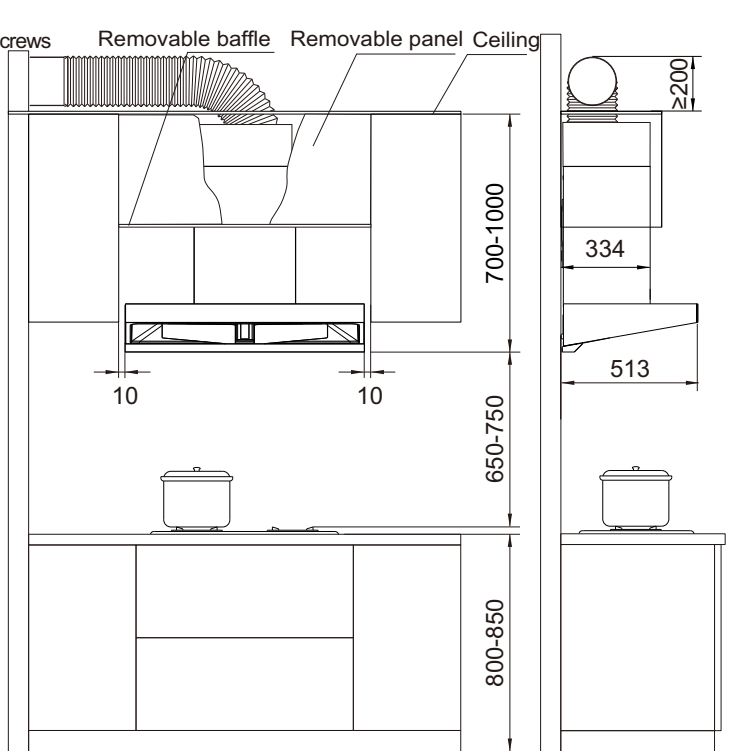


(Figure 1-2 Installation method of hood with removable baffle)

Figure 3

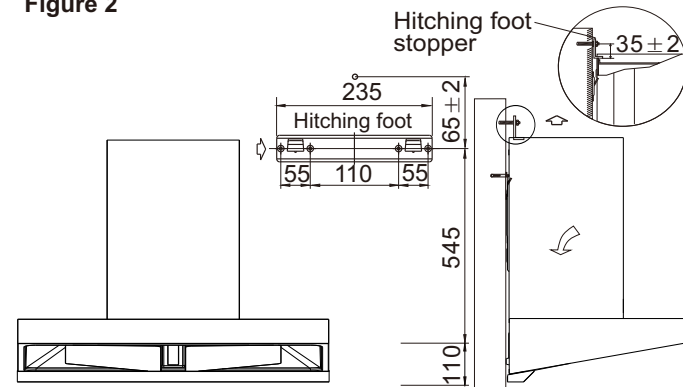

● Install hitching feet

According to the size of the hitching feet, drill four 60-70mm-deep holes on the wall accordingly with an 10mm-diameter drill bit (overlarge holes are prohibited). Press the expansion pipe into the holes, and then fix the hitching feet with 4 accompanying 4×60mm wood screws. Drill a hole with diameter of 10mm and depth of 50-55mm at the position 65mm above the four holes and insert the M6 metal expansion pipe into the hole. (Figure 2)

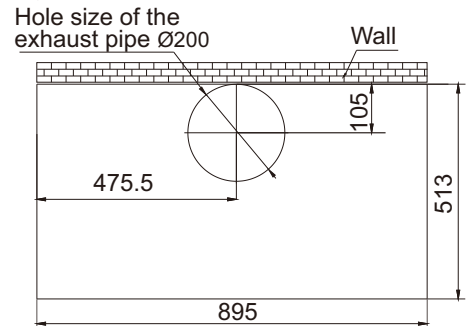

Ceiling hole sizes
(Projection size of the hood top)

● Adjust drawing panel

Pull the two brackets of the drawing panel upwards to an appropriate height and then pull out the drawing panel by holding both sides. Remove the protective film (excluding cold plate materials) on the drawing panel and insert it along the gap between the main hood panel and the housing. Then adjust it to the proper height.

● Install hood body

Fix the check valve as shown in Figure 5. Then align the hanging holes in the back of hood with the hooks of hitching feet according to Figure 2, and press them together. Shake the body to check if it's hung securely. After the body is mounted, install the hitching foot stopper and gaskets to the M6 metal expansion pipe, and then tighten the nuts (to prevent accidental decoupling of the body under external force).

● Install drawing panel

As shown in Figure 1-1, there is certain gap between the drawing panel and the top plate. Push the panel against the top plate and then fix it to the top plate with ST4.2 × 18 screws.

(If installation method in Figure 1-2 is adopted, there's no need to adjust and install the drawing panel)

Note: If there is no host attached panel, no adjustment and installation is required.

Install the aluminum foil exhaust pipe

● Drilling position of the aluminum foil exhaust pipe (public flues do not require drilling)


- Aluminum foil exhaust pipe and hob facing the window: Remove one of the glasses and install a plywood with ventilation holes or punch directly on the glass.
- Hob away from the window: Install the aluminum foil exhaust pipe through the window that is close to the hob and connected outside; or install it by punching on the wall that is close to the hob and connected outside.
- Drill hole through the wall: Determine the location of the aluminum foil exhaust pipe against the wall and draw the drilling range (i.e. a circle slightly larger than the pipe OD). Then use a long drill bit to drill through the wall. Pay attention to the wall structure and material, so as not to destroy other parts of the wall.

● Link the aluminum foil exhaust pipe

Insert the end of aluminum foil exhaust pipe without fixed strip to the pipe connection and stick with tapes. Straighten the aluminum foil exhaust pipe and then connect the pipe to the connection of public flue outlet (straighten the pipe directly to the outdoor if there is no public flue). This can be done directly when the public flue connection or wall hole is larger than the pipe. Otherwise, there are four types of pipe connection small ends (OD: 140, 150, 160, 170 and 180 respectively) to be chosen from according to the hole size. Then cut the excess part with scissors.

Then, insert the end of the aluminum foil duct with the duct fixing strip into the outer ring of the check valve interface, and then fix it with three ST4.2×8 screws distributed and sealed with duct tape. Finally, put the four snaps of the check valve interface into the four slots of the check valve, and rotate clockwise to fix the duct on the check valve.


Figure 4

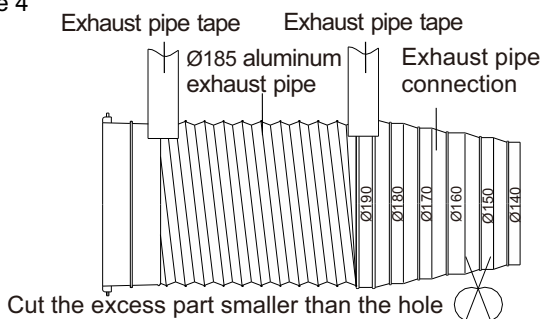

Note: During installation, straighten the aluminum exhaust pipe to avoid noises in semi-stretched state. Excess part may be cut with a wire cutter.

The exhaust wall hole diameter shall be close to that of the exhaust pipe, which shall not be too small. Otherwise, it will cause poor exhaust efficiency, more noises and lower airflow, etc. The connection between the pipe and the hole or the public flue must be sealed tightly to ensure that, the pipe and the check valve or public flue are connected securely. The blades at the check valve connection or public flue connection must be flexible. Suggestion: When the range hood is matched with the Boss anti-smoke back check valve, there is no need to install the check valve blade.

Figure 5

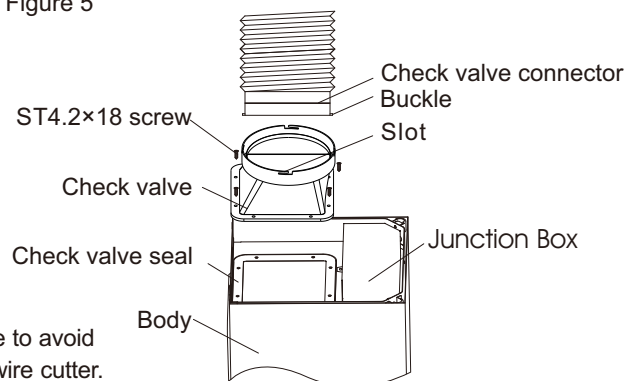


Installation of left and right baffles

● Remove the left and right baffles from the package first, then hang the hanging feet of the baffles into the machine hanging foot holes in the direction shown.


● Then push the baffle plate upward by hand so that the baffle plate touch bead shaft is inserted into the touch bead hole of the range hood as shown in the figure.

Note: The left and right baffles cannot be used together, and the oil leakage hole of the baffle is on the back side; the oil cup can only be installed after the baffle is installed.

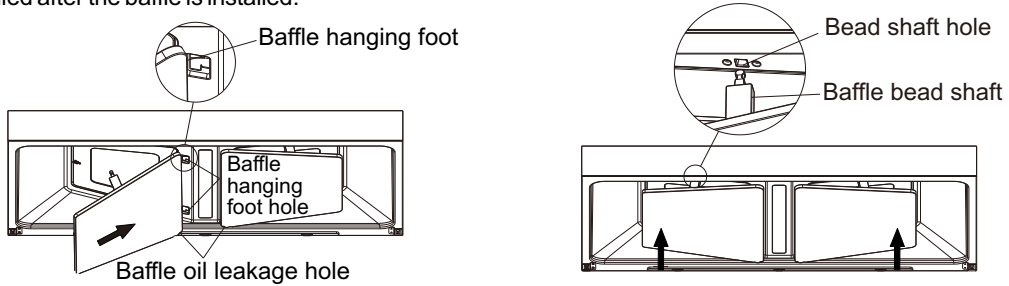

User Manual

 Switch control panel








Hand wave induction

Lighting

Low Turbo/High Power

Turn on the power, the buzzer sounds to indicate the power-on state.

 <p>Lighting</p>	<p>Press the "Lighting" button, the lighting is on, then press the "Lighting" button, the lighting is off, the "Lighting" button only controls the lighting.</p>
 <p>Power</p>	<p>Press the "Power" button, the power button icon lights up long, the product is in the power on state.</p> <ol style="list-style-type: none"> 1.If only the lighting is on, pressing the "Power" button again will directly turn off the lighting. 2.If the fan is working, press the "Power" button again, the power button icon will flash and the hood will enter a delayed working state and automatically turn off all functions after 1 minute. 3.If the power button icon flashes when the "Power" button is pressed again, all functions will be turned off.
 <p>Turbo/High</p>	<p>In the power on state.</p> <ol style="list-style-type: none"> 1. Press the first time, enter the turbo gear, turbo/high gear icon flashing, after 3 minutes into the high gear, at this time the icon long light. 2. Press the second time, into the high gear, turbo/high icon light. 3. Press the third time, back to the turbo gear, turbo/high icon flashing.
 <p>Low</p>	<p>Press the "Low" button, the low gear icon lights up for a long time and the impeller rotates smoking at low speed.</p>
 <p>Hand wave induction</p>	<ol style="list-style-type: none"> 1. In the off state, the first wave of the hand automatically turns on the power ; the second wave of the hand turns on the turbo gear; the wave of the hand turns on the low gear function in the turbo gear. 2. In the off state, press and hold the "Turbo/High" button and the "Low" button at the same time to turn the sensor function on or off. If users are not used to this function, it is recommended to turn off its induction function.

Maintenance

Notice

●The hood shall be cleaned and maintained regularly depending on the surroundings, so as to keep its cleanness & efficiency and extend its service life.

We recommend that: Clean the outer surface of range hood after each cooking.

To ensure smooth discharge of fumes, the protective screening shall be cleaned regularly according to actual situations. Be careful to avoid damage when cleaning.

●It is recommended to use a neutral detergent to clean instead of strong detergents, and dry with a soft cloth. If your range hood is a mechanical switch, you should also avoid detergent touching each control key.

●Do not allow stains to stay on the surface of the hood for too long.

 
●Please do not use cleaning balls, brushes and other rough objects to clean the hood to prevent the body surface from scratching.

●When cleaning or maintaining the hood, please wear protective gloves to prevent wounding during wiping.

●Please check and clean the oil cup regularly. Hold the oil cup with both hands as shown on the right, pull it outward and pour off the waste oil.

●The range hood shall be started before cooking.

●Please unplug it during long-term shutdown, but please do not pull hard.



Removal of Components

Note: The installation procedures of the following components are in reverse with the removal. Please wear protective gloves during operation to prevent the sharp edge of metal hurting your hands.


⚠ Before installation or disassembly, the power must be disconnected to avoid electric shock.

Removal of lamp

●Unscrew the two screws on the small cover plate, remove the small cover plate, and pull out the connector.

●Use a small one-piece screwdriver or something relatively sharp and small to embed in the gap between the lamp cover and the fume hood installation.


●Pry it outward and remove the spotlight from the fume hood to replace the spotlight.

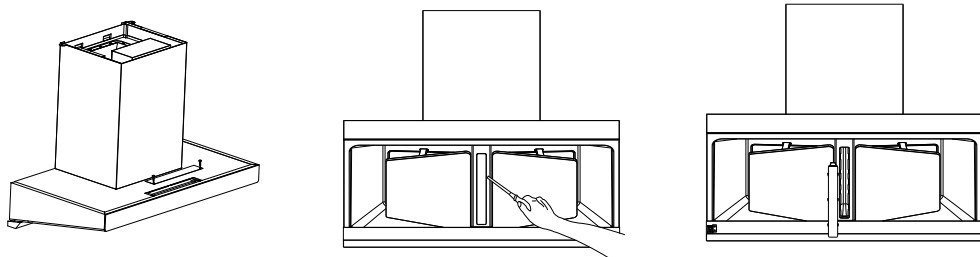

Lamp image		Lamp information	
	Lamp Type	Rectangular LED	
	Max Power	4W	
	Voltage	12VDC	
	Dimension	See the lamp image	

Removal of switch


- Remove the small cover plate by unscrewing the 2 screws on the small cover plate.
- Unscrew the 2 screws on the switch cover plate, rotate and flip out the switch cover plate, pull out the switch assembly, and repair or replace it.

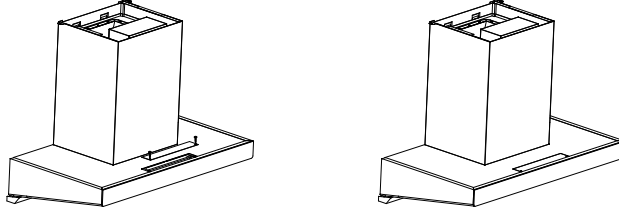

Removal of filter

- Remove the oil cup first, then pull the baffle plate downward with force by hand and remove the baffle plate in the direction shown in the figure.
- Align the Phillips screwdriver with the filter screen screw hole and force it upward slightly while rotating it about 90 degrees counterclockwise to disengage the screw from the fume hood snap slot.
- Then hold the bottom of the filter with one hand, hold the edge of the filter with the other hand, and then pull it out in the direction shown by the arrow to remove the filter.

Note: The left and right filters are removed in the same way, and the installation and removal steps are reversed.

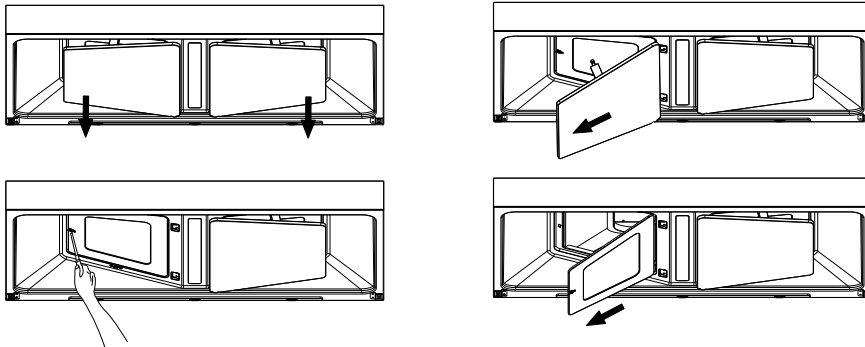

Removal the whole range hood


1. Unplug the power supply, remove the oil cup and take off the whole machine.
2. Unscrew the four screws at the rear of the mainframe panel, tilt the mainframe panel forward to a certain angle and then pull it out with upward force with both hands.
3. Remove the mainframe attachment panel from the mainframe panel.
4. Take out the noise reduction cotton, then use a Phillips screwdriver to screw down the fastening screws of the noise reduction panel and take out the noise reduction panel.
5. Turn down the fastening screw on the retaining ring and take out the retaining ring.
6. Unscrew the cap clockwise and take out the impeller vertically.

Install the impeller in the opposite way of the disassembly procedure. (When putting on the impeller, please put some lubricant in the shaft hole of the impeller.)


Note: Step 3 is not necessary if there is no host panel installed.




In general, the range hood body does not need to remove. The removal needs to be completed by professional maintenance staff.

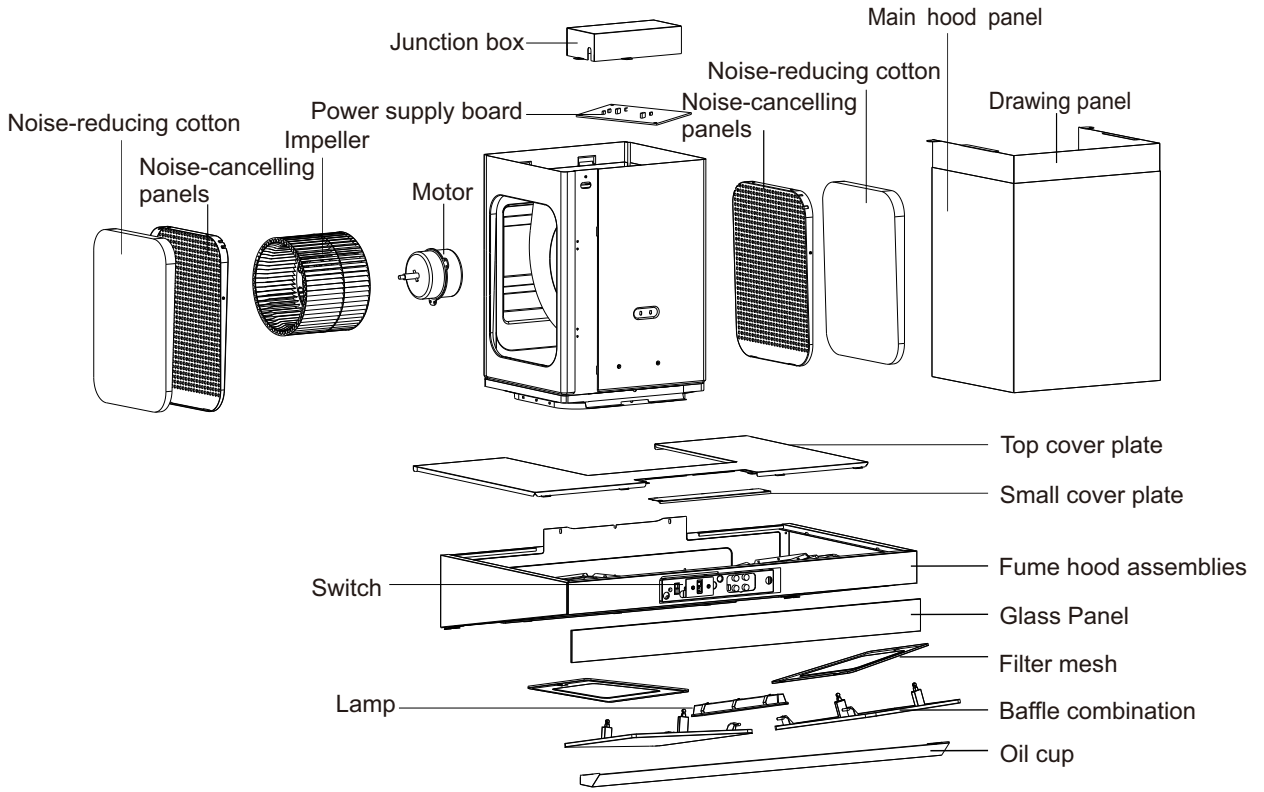

Circuit Diagram

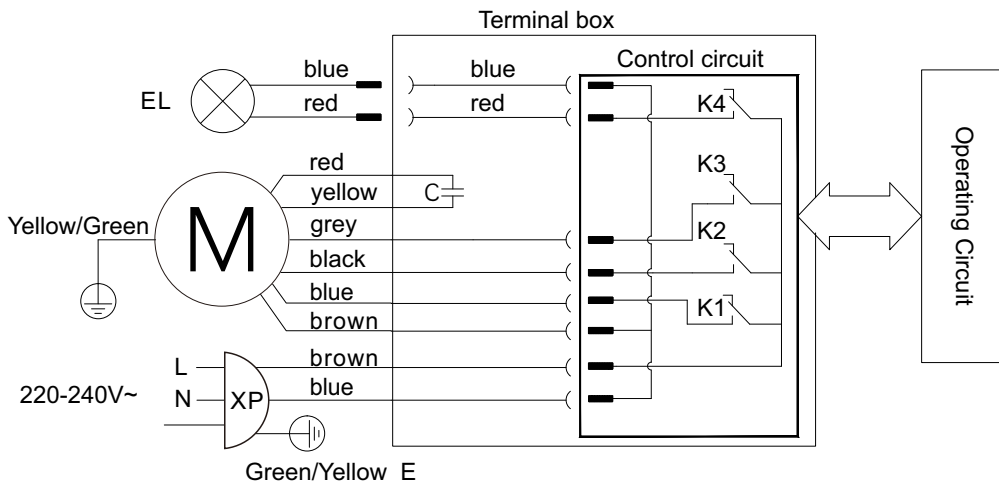

Troubleshooting of General faults

Fault	Cause	Solution	 Warning
No response after pressing any icon (e. g. the impeller does not rotate, or the light is off)	The power plug is not connected properly or there is power failure	Plug in the power plug	When connecting or replacing the plug, please unplug the power plug.
Pressing the lighting icon, the headlamp is not lit	The light is damaged or poorly connected	Replace the light or plug in the plug	
Induced current exists on the hood body may paralyze hands	The power socket is not grounded well	Use single-phase three-pole socket and well grounded	
Abnormal sound during impeller running	The impeller is loose, and the cap is not tightened	Tighten the cap	
No oil in the oil cup after a period of time	The hood body is tilt	Adjust the body to the horizontal state	

Edition: A/0

Publication Date: June, 20, 2021

ROBAM